

Whisperflo System



OPERATIONAL KEYS TO REMEMBER:


- You need to be on your mattress when adjusting firmness as the mattress actually reads your body weight.
- Only one of you may use your control at a time. Using the two remotes simultaneously will cause the unit to lock out one user.
- Fuses are located in a panel at the cord attachment, easily accessible.
- Cord attachment can be adapted.
- Air filter is removable for easy cleaning.
- Pressure is based upon body weight. The back pressure that your weight creates will be broken into 100 different firmness options.

The patented design of the Whisperflo unit allows you to choose from 100 different firmnesses, enabling you to find just the right fit for you. Not only will you be able to find that very specific fit, you will also be able to store that exact firmness in memory - returning to your favorite feel at any time. Our patented Whisperflo system takes the guesswork out of a variable firmness mattress. We have also added a 100% inflated feature. This will allow you to, at the push of a button, return the mattress to 100% inflated, resulting in a look great for making your morning mattress. Remember, when you return to bed at night, simply crawling into bed and touching your memory button will return you to the fit that you enjoy.

We have also taken great care in designing this unit to maximize durability. Our Whisperflo unit utilizes a ball bearing, variable speed motor that not only allows us to precisely control motor speed - getting you to your exact firmness, but will truly last a lifetime. Also, we have designed a unique air sealing valve that improves this units ability to maintain your preferred air level over long periods of time. In fact, the valve is designed to use your body weight in helping to seal the system. That's right, increased weight guarantees a great seal. Also, we have included two manual modes of operating our new unit. The first manual mode (Mode 1) operates similar to our standard unit by pushing the plus and minus button. The system then responds by firming or softening the mattress. When your finger is removed from the keypad, the unit displays the pressure setting that you're at for future reference. Memory and Instant Inflate are still features of this mode. The second manual mode (Mode 2) works the same way as the first manual mode but firms or softens both sides simultaneously. Again, memory and 100% inflate will operate in this mode as well.

Whisperflo Control Panel

Control Panel Display

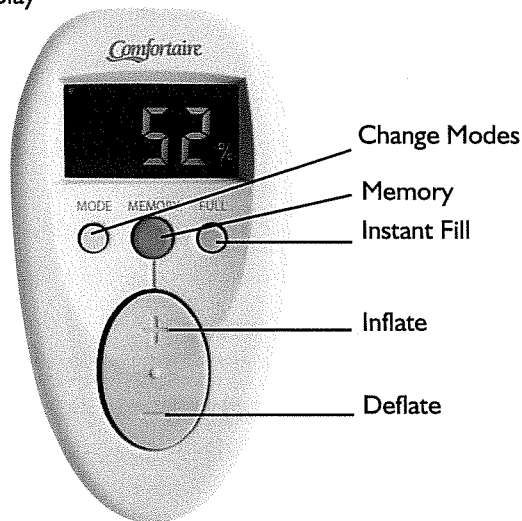

Your Whisperflo air control unit is designed to allow you, through two unique modes of operation, to find a very specific firmness and store that firmness in memory. The unit will arrive to you pre-set in the first manual mode (Mode 1). This mode allows you to change the firmness of your mattress by simply pressing the (+) and (-) keys. When you remove your finger from the keypad, the pressure that you are currently at will be displayed on the screen. The second manual mode (Mode 2) operates the same as Mode 1 but allows you to firm or soften both sides simultaneously.

Mode 1 (One dot)

Mode 2 (Two dots)

To change modes:

Press and hold the "Mode" button until beep(s). If you hear two beeps, you have changed from Mode 1 to Mode 2 and there will be a dot in both of the two top corners of the screen. If you hear one beep, you have changed from Mode 2 to Mode 1 and there will be one dot on the corresponding top corner of the screen.

Memory:

Your instant memory setting works in either mode. Once you have found the feel that you enjoy, hold the blue button in the middle of your remote until you hear a beep. Once you hear this beep, remove your finger as your firmness has been successfully stored. You can now change your firmness to any desired level and rest assured that you can return to your favorite setting by quickly pushing and releasing the blue memory button. Don't hold the blue button down until beep when attempting to go to your memorized firmness or the unit will replace your old memory with the pressure currently being displayed on the screen.

If the memory button is pressed while the unit is operating in Mode 2, the unit will achieve the same firmness for both sides; the achieved firmness will be equal to the stored memory firmness of the side that the memory button was pressed on. When memory firmness is being achieved in Mode 2, the unit will always complete the right side before beginning the left side.

Instant Fill:

The instant fill feature will work in either mode. This instant fill button takes your mattress to 100% full and then automatically shuts off. Note: You don't need to be on the mattress for this feature to work. The instant fill function will work while you are on or off the mattress. When the Instant Fill feature is being used in Mode 2, the unit will always complete the right side before beginning the left side.

Soft and Firm Keys:

In both manual modes, the (+) and (-) keys will simply firm up and soften the mattress. When you remove your finger from the keypad, the current mattress pressure will appear.

Note: This system is designed to use the back pressure of your weight to achieve desired firmness, and, therefore, changes to firmness should be made while lying on the mattress.